


MODEL V6548049

PARTS DRAWING _____ DESSIN DES PIÈCES _____ ESQUEMA DE LAS PIEZAS

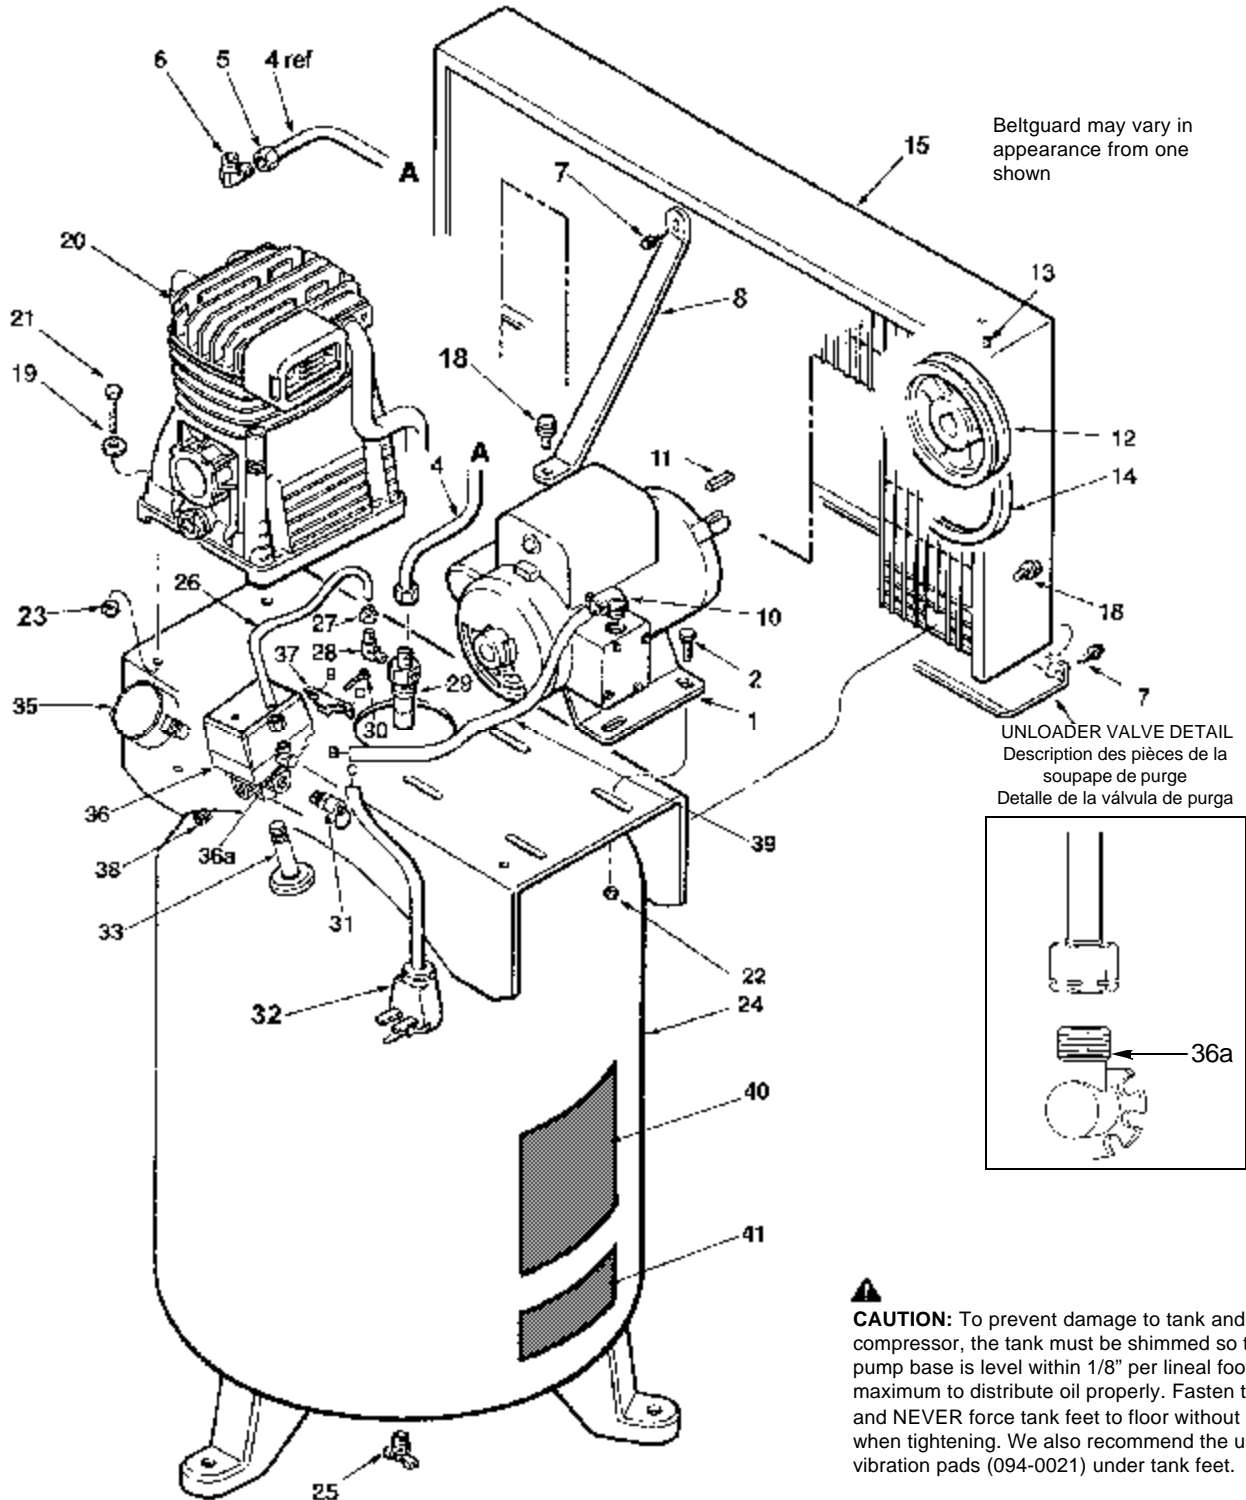

CAUTION: To prevent damage to tank and compressor, the tank must be shimmed so the pump base is level within 1/8" per lineal foot maximum to distribute oil properly. Fasten to floor and NEVER force tank feet to floor without shims when tightening. We also recommend the use of vibration pads (094-0021) under tank feet.

MODEL V6548049

PARTS LIST LISTE DE PIÈCES LISTA DE

| Item Art | Part No Nº / P | Qty Qté | Description | Description | Descripción |
|-------------|-------------------|------------|------------------------------------|--------------------------------|---------------------------------------|
| 1 | 160-0235 | 1 | Motor..... | Moteur..... | Motor |
| 2 | N/A | 4 | Bolt, 3/8 x 1"..... | Boulon..... | Perno |
| 4 | 145-0315 | 1 | Transfer tube A-A | Tube..... | Tubo |
| 5 | 058-0016 | 2 | Compression nut..... | Écrou de compression..... | Tuerca de compresión |
| 6 | 064-0002 | 1 | Elbow..... | Coude..... | Codo |
| 7 | N/A | 5 | Screw #10 x 3/4"..... | Vis..... | Tornillo |
| 8 | 114-0349 | 2 | Bracket..... | Support..... | Soporte |
| 10 | 071-0003 | 1 | Strain relief, 90°..... | Soulagement de traction..... | Aliviador de esfuerzo |
| 11 | 146-0016 | 1 | Key..... | Clé..... | Chaveta |
| 12 | 006-0086 | 1 | Pulley..... | Poulie..... | Polea |
| 13 | 061-0009 | 1 | Setscrew..... | Vis d'arrêt..... | Tornillo fijador |
| 14 | 007-0035 | 1 | Belt..... | Courroie..... | Correa |
| 15 | 142-0111 | 1 | Beltguard..... | Garant de courroie..... | Protección de correa |
| 16 | 125-0154 | 1 | Underpan..... | Tiroir..... | Bandeja |
| 18 | N/A | 5 | Screw, 1/4-20 x .50..... | Vis..... | Tornillo |
| 19 | N/A | 4 | Washer 3/8"..... | Rondelle..... | Arandela |
| 20 | 040-0205 | | Pump, B4900 (Less flywheel)..... | Pompe..... | Bomba |
| 21 | N/A | 4 | Bolt, 5/16 x 2"..... | Boulon..... | Perno |
| 22 | N/A | 4 | Nut, 3/8"..... | Écrou..... | Tuerca |
| 23 | N/A | 8 | Nut, 5/16"..... | Écrou..... | Tuerca |
| 24 | 021-0210 | 1 | Tank assembly, 80 gal..... | Ensemble du réservoir..... | Conjunto de tanque |
| 25 | 072-0001 | 1 | Petcock..... | Robinet de décompression..... | Llave de desagüe |
| 26 | 145-0084 | 1 | Bleeder tube..... | Tube..... | Tubo |
| 27 | 058-0017 | 2 | Compression nut..... | Écrou de compression..... | Tuerca de compresión |
| 28 | 064-0003 | 1 | Elbow..... | Coude..... | Codo |
| 29 | 031-0060 | 1 | Check valve..... | Soupape..... | Válvula |
| 30 | 061-0121 | 1 | Screw..... | Vis..... | Tornillo |
| 31 | 136-0007 | 1 | Pressure relief valve..... | Soupape..... | Válvula |
| 32 | 026-0300 | 1 | Power cord C-C | Câble..... | Cordón |
| 33 | N/A | 1 | Nipple, 1/4" NPT x 2.5" lg..... | Manchon fileté..... | Niple |
| 35 | 032-0025 | 1 | Gauge..... | Manomètre..... | Manómetro |
| 36 | 034-0108 | 1 | Pressure switch..... | Interrupteur..... | Interruptor |
| 36a | 136-0064 | 1 | includes item 36a..... | inclut les élément 36a..... | incluye los artículo 36a |
| 37 | 071-0019 | 2 | Valve, unloader..... | Soupape..... | Válvula |
| 38 | N/A | 2 | Strain relief..... | Soulagement de traction..... | Aliviador de esfuerzo |
| 38 | N/A | 2 | Plug, 1/4" NPT..... | Bouchon..... | Tapón |
| 39 | 026-0299 | 1 | Interconnect cord B-B | Câble..... | Cordón |
| 40 | 098-1089 | 1 | Warning label..... | D'avertissement étiquette..... | Amonestadora escritura de la etiqueta |
| 41 | 098-1085 | 1 | Warning label..... | D'avertissement étiquette..... | Amonestadora escritura de la etiqueta |

*N/A - These are standard parts available at your local hardware store.
 *N/A - Ces pièces sont des pièces standard disponibles en quincaillerie.
 *N/A - Estas son piezas estándares disponibles en su ferretería local.